What's Included



1 HD Wi-Fi Security Camera



1 Mounting Plate (Pre-attached)





2 Mounting Screws



2 Drywall Anchors



3 Cable Clips



1 Power Adapter



1.


1 microSD Card (Pre-installed)



Quick Start Guide & Safety Information

NOTE: Camera configuration, memory card size, power adapter plug, and the number of accessories may vary by model. Please refer to your package for specific details. Your accessories might appear different from the ones depicted in this guide.

Camera Overview

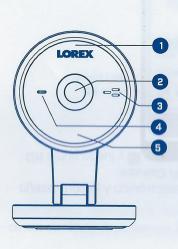

Status LED

- Steady Red: Camera is starting up or resetting.
- Slow-Flashing Red: The router or network that the camera is connected to is down. Check your router settings.
- **Steady Blue**: Camera is connected to FLIR Cloud services.
- * Fast-Flashing Blue: Firmware upgrade in progress. DO NOT UNPLUG YOUR CAMERA.
- ** Fast-Flashing Blue and Red: Firmware is downloading and update will begin shortly.

 DO NOT UNPLUG YOUR CAMERA.
 - * Slow-Flashing Blue: Camera setup in progress.
- ** Slow-Flashing Blue and Red: Camera is ready for setup.
 - **LED Off**: Camera is in privacy / covert mode, or is turned off.
- 2. Camera Lens

4. Microphone


3. Speaker

5. Night Vision LED

Setup Instructions

Step One: Initial Setup

1. Plug in your camera. Camera turns on automatically when the power adapter is connected.

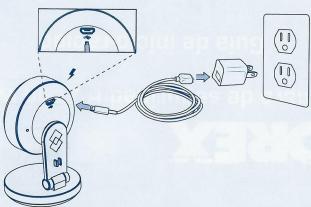

NOTE: See the "**Installing Power Adapter Plugs (European Users Only)**" section for instructions on installing European power adapter plugs.


- 2. Remove the protective film on the lens.
- 3. Download the Lorex Secure app to your mobile device, then launch the app.






4. Tap **SIGN UP** and enter your email address and password to create a new FLIR Cloud account.

NOTE: If you already have an existing FLIR Cloud account, enter your email address and password and tap **LOG IN**.

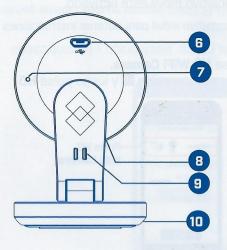

- 6. Micro USB Power Port
- 7. Reset Button
- 8. microSD Card Memory Slot
- **9. Micro USB Power Cable Holder:** Secure the USB power cable with this clip.
- 10. Camera Base

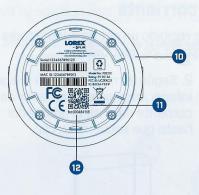



- 10. Camera Base
- 11. OR Code
- 12. Device ID
- 13. Mounting Plate

Step Two: Setting Up Your Camera

NOTE: If Bluetooth (BLE) is not supported on your mobile device, follow the setup instructions in the "**Wi-Fi Setup (Android Users Only)**" section.

1. Make sure your mobile device's Bluetooth is turned on.

NOTE: Refer to your mobile device's user guide for instructions on turning on Bluetooth.

2. Tap ADD DEVICE, then tap HD WiFi Camera.

If this is not the first device on your account, tap
and then tap HD WiFi Camera.




3. Follow the on-screen instructions to complete setup.

Installing Power Adapter Plugs (European Users Only)

If you are a European user, you received a set of power adapter plugs relevant to your country. To install the power adapter plugs:

1. Tuck in the power pins as illustrated in the image below.

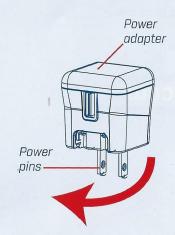

2. As shown in the image below, push the power adapter plug in the power adapter body until you hear a click.

